 





Frontansicht

Seitenansicht


- | | | | |
|-------------|-------------|--------------|--------------|
| HTA 811-... | HTC 811-... | HTSV 811-... | AHT 870- |
| HTS 811-... | BTC 850-... | BTSV 850-... | AHTV 870-... |
| BTS 850-... | | | HTCV 811-... |
| IQ HTA | | | BTCV 850-... |
| IQ HTS | | | |
| IQ BTS | | | |

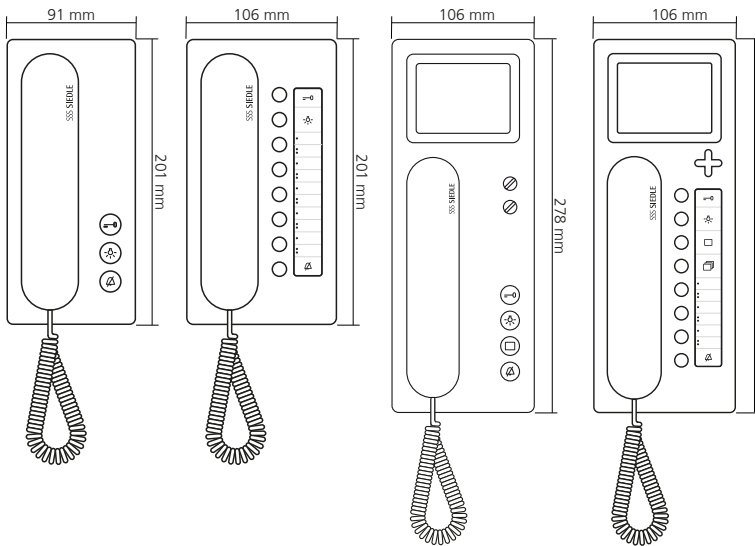


- | | | | | |
|-------------|-------------|--------------|--------------|--------------|
| AFS 870-... | BFC 850-... | AFSV 870-... | AHF 870- | AVP 870- |
| BFS 850-... | | BFSV 850-... | AHFV 870-... | BVPS 850-... |
| | | | BFCV 850-... | BVPC 850-... |

 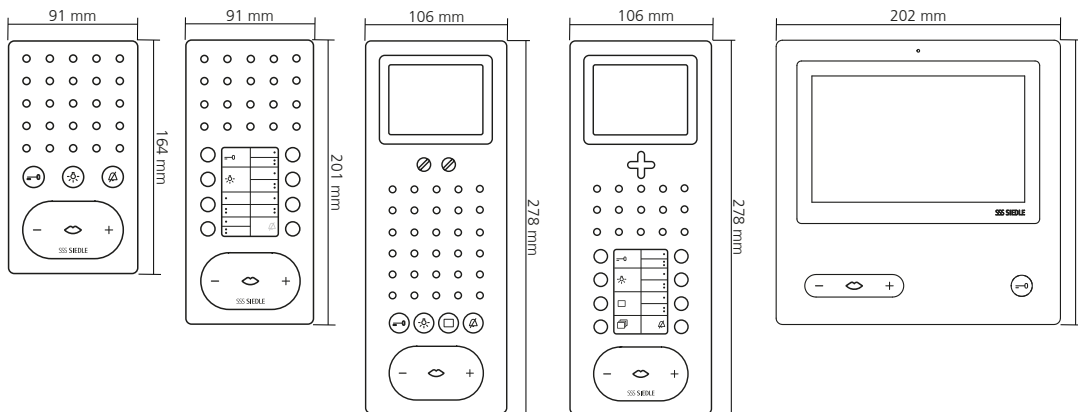



A 150-10/A180-10

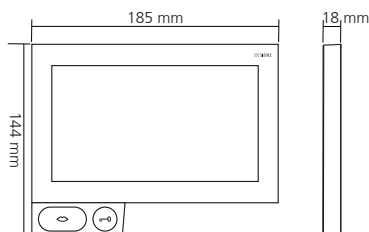

AIB 150-...

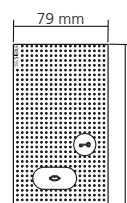

VIB 150-...

 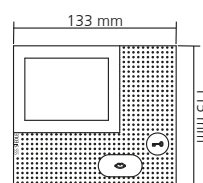

Service

Kundenservice im Werk Furtwangen
 +49 7723 63-375
 support@siedle.de