

SLC SLC Controller CV RF 4x8A 12-36V

S21002



1. Pair RF Receiver with RF remote:

- 1.1. Connect and wire up the RF receiver correctly, power on.
- 1.2. Turn on the remote, click the "Learning Key" button on receiver, immediately click zone number then touch color wheel on remote, the connected led light on receiver flickers twice, means well paired.

Note: one receiver can be paired with max 8 remote controls.

2. Delete the pairing:

- 2.1. Wire up the RF receiver correctly, power on
- 2.2. Hold the " Learning Key" button on receiver over 3 seconds until the connected led light on receiver flickers twice, means well deleted.

3. MASTER/SLAVE jumper:

In a group of multiple receivers, in order to get a good sync of RGB running effect, please set only 1 receiver as MASTER, the other receivers as SLAVE.

After setting the Master, the Master receiver need to power off and on once to make the Master function take effect.

Picture

● Waterproof grade: IP20 ● Radio Frequency : 868mhz

Input Voltage	Output Current	Output Power	Remarks
12-36VDC	4x8A	4x(96-288)W	Constant voltage

Function introduction

RF remote

WiFi to RF bridge router

Smartphone IOS/Android

Size

