
## **IBB 1118CP**

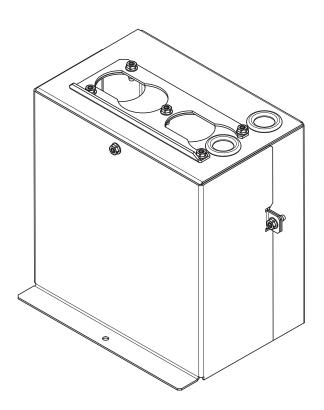

# Installation and Operating Instruction


Downwards-facing water connection

Order no.: 452171.66.05-EN EN · FD 0403

### **Table of Contents**

1	Scope of supply	EN-2
2	Assembly	
	2.1 Original condition	EN-2
	2.2 Dismantling the hydraulic connection at the side	
	2.3 Closing off the casing at the side	EN-4
	2.4 Interior view	EN-4
	2.5 Installing the downwards-facing connection	EN-5
	2.6 Installing the pipe mount	EN-5
	2.7 Connecting the corrugated pipes	EN-6
	2.8 Cable paths, cable fixing	EN-7
	2.9 Installing the cover plate after establishing the hydraulic connection	
	and performing a leakage tightness test	EN-8


### 1 Scope of supply

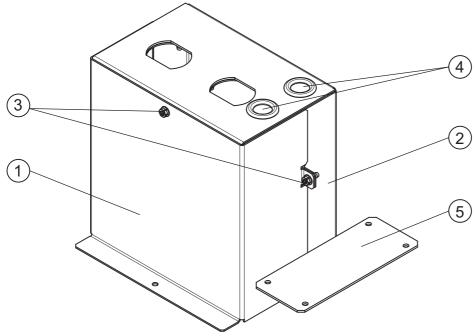

- 1) Cover of installation shaft
- 2) Rear wall of installation shaft
- 3) SHR 6 KT M5x12 AE7500 TX25 A2K NZG
- 4) Grommets
- 5) Side cover of water connection

### 2 Assembly

### 2.1 Original condition

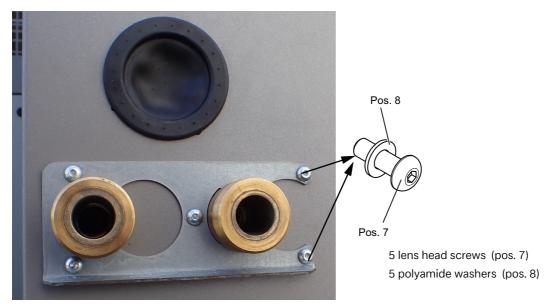


### 2.2 Dismantling the hydraulic connection at the side


■ Undo the union nuts on the inside of the unit



- Remove 5 screws (pos. 7 + 8) on the locking plate
- Slide the locking plate (pos. 6) to the left and remove it Retain the plate!

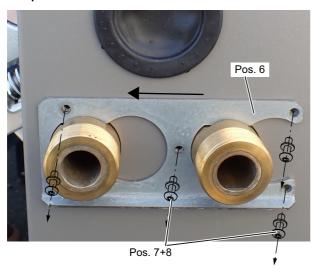


■ Remove the connection fittings (pos. 9)

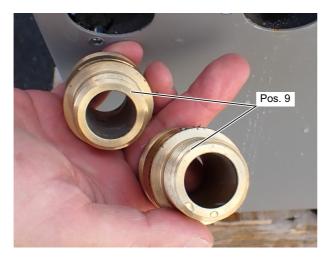

### 2.3 Closing off the casing at the side


■ Fasten the cover panel for the water connection (pos. 5) using 4 lens head screws (pos. 7) and 4 polyamide washers (pos. 8).

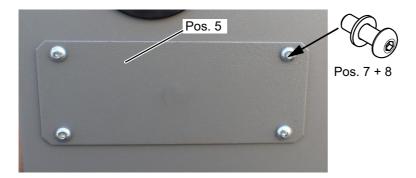

#### 2.4 Interior view

- Remove 3 screws (pos. 11) and dismantle the cover of the baseplate (pos. 12)
- The panel (pos. 12) is no longer required. Retain the screws (pos. 11)!

#### **Before**

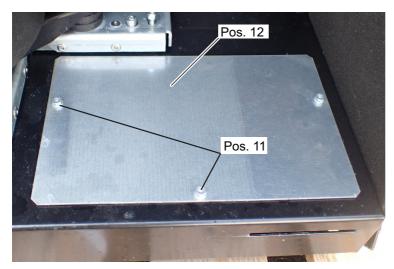

#### **After**




### 2.5 Installing the downwards-facing connection

■ Insert 2 grommets (pos. 4) into the designated holes




■ Hook the two eyelets onto the designated tabs and then fasten the rear wall of the installation panel (pos. 2) using 2 screws (pos. 11)

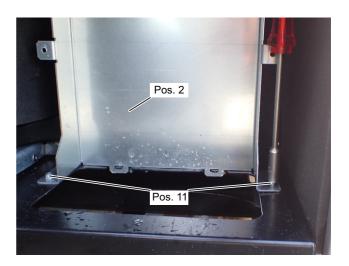


#### 2.6 Installing the pipe mount

Insert the connection fittings (pos. 9) into the locking plate (pos. 6)

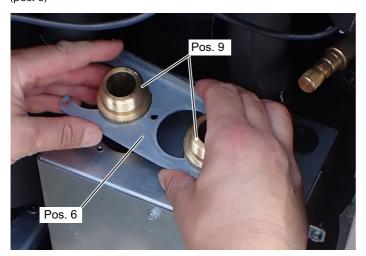



Position the locking plate (pos. 6) and fasten it using 5 screws (pos. 3)

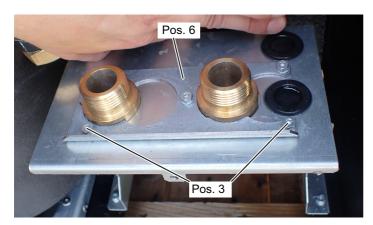

### 2.7 Connecting the corrugated pipes

Bend the corrugated pipes
It is essential to hold the pipe in place!

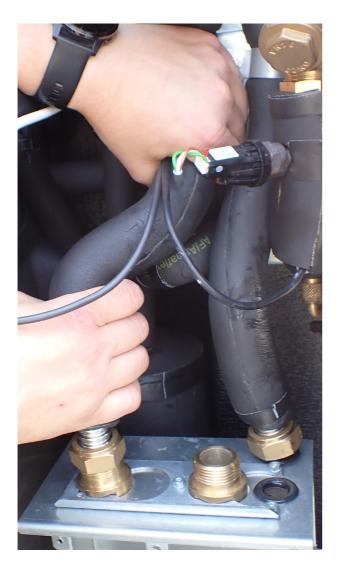


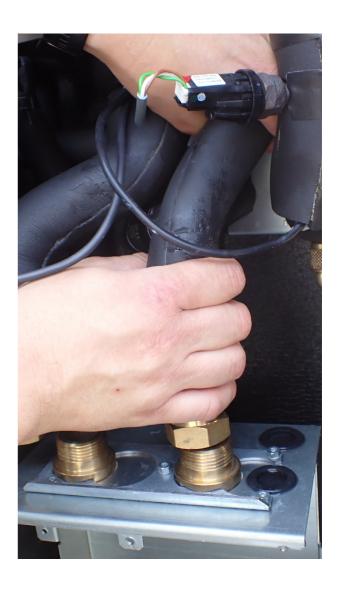

■ Insert the gasket (pos. 10) and tighten the union nuts on both sides



### 2.8 Cable paths, cable fixing

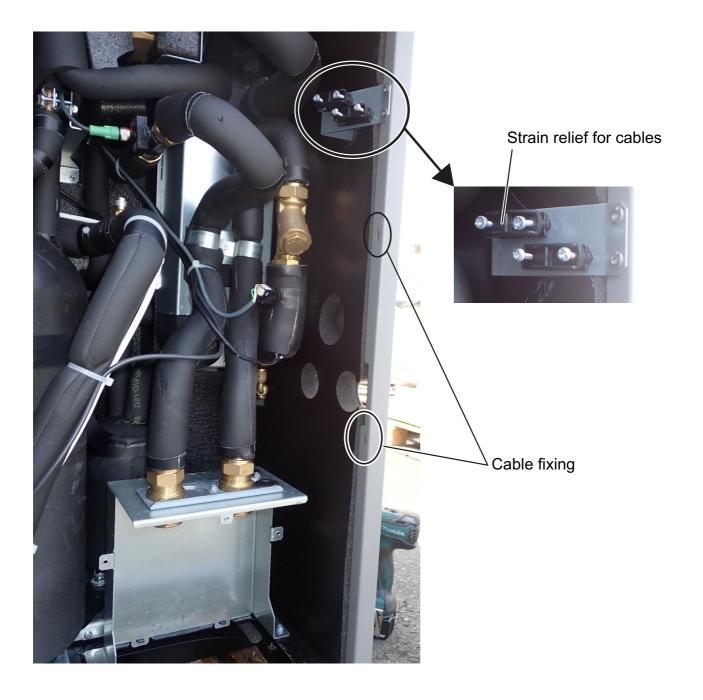

## 2.9 Installing the cover plate after establishing the hydraulic connection and performing a leakage tightness test

■ Pre-position the cover of the installation shaft (pos. 1).



■ Fasten the cover of the installation shaft using 4 screws (pos. 3 + 11).

